



JEUX SAKURA IRON-T

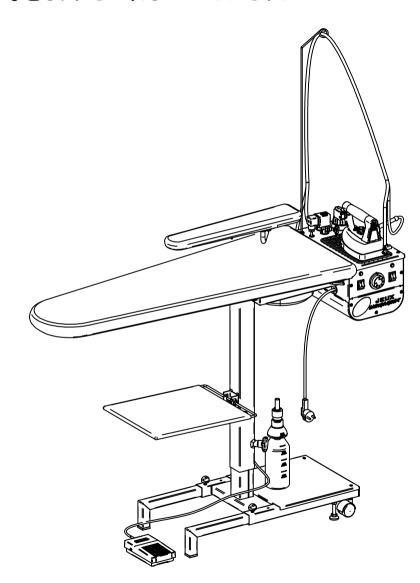

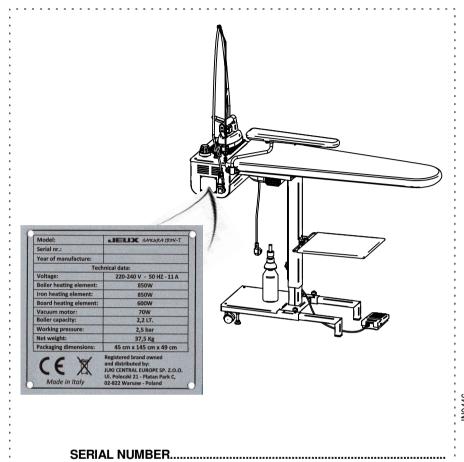

Data, descriptions and drawings in this manual are not binding. The company reserves the right to make any change if necessary.

REGISTERED BRAND

OWNED AND DISTRIBUTED BY:

JUKY CENTRAL EUROPE SP. Z.O.O UI. Poleczki 21 - Platan Park C 02-822 Warsaw (Poland) TEL.: +48225450400 FAX.: +48225450411 TAX ID.: PL9512147076


cod. - A00848

MADE IN ITALY

INSTRUCTION MANUAL

ATTENTION


Please read carefully the overall instruction manual before carrying out any operation on the unit, in order to protect the operator and avoid any damage.

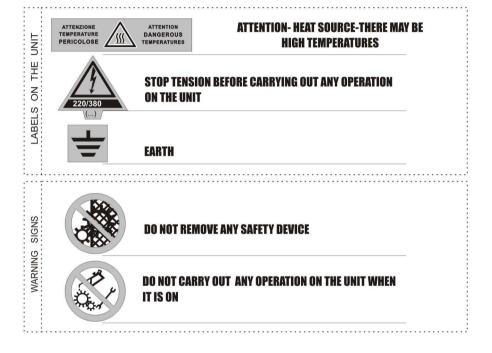

SAFETY WARNINGS:

*Before using the unit, please verify that the mains voltage matches what is indicated on the unit plate. The unit must be plugged into mains and sockets duly earthed. * If the unit plug and the socket do not match, please have the plug replaced with a right one by qualified technicians. *The unit is electrically safe under the condition that it is duly earthed, as provided for by the current electrical safety rules. The manufacturer cannot be held responsible for any damage arising from the mains

being badly earthed. If in doubt, please contact a qualified technician. * After unpacking the unit, please make sure that it is untouched. If in doubt, do not operate the unit in any case and contact a qualified theorician. *Please make sure that all packaging of the unit (plastic bags, expanded polystyrene...) is away from children and carefully disposed of, since it may be dangerous. * Please do not use adaptors and/or extensions. If needed, only simple adaptors and extensions complying with the current safety rules must be used. However, please be careful and do not exceed the power limits marked on the adaptor. * The manufacturer cannot be held responsible for any damage arising from improper. wrong and unreasonable use of the unit and from careless service carried out by unqualified technicians. * Do not touch the unit with damp, wet hands or feet. Do not immerse the unit into water. * Do not operate the unit in bathrooms or any damp environment. * Do not pull the electric flex or the whole unit with damp, wet hands or feet. * Do not let children or the incompetent use the unit, unless under adults' control. * Do not leave the unit unattended when it is on, since it may turn dangereous. * Please make sure that the unit is turned off and disconnected from the power point before cleaning it out or carrying out any service on it. *Should the unit fail or work badly, please switch it off and never break it open. If service is needed, please contact service centres authorised by the manufacturer and ask for original spare parts to be used. Whether these warnings are disregarded, the safety of the unit may be undermined. * The user is kindly requested never to replace the electric flex of the unit. When it is damaged or needs being replaced, please contact service centres authorised by the manufacturer. *Please always disconnect the unit from the power point when it is not used.

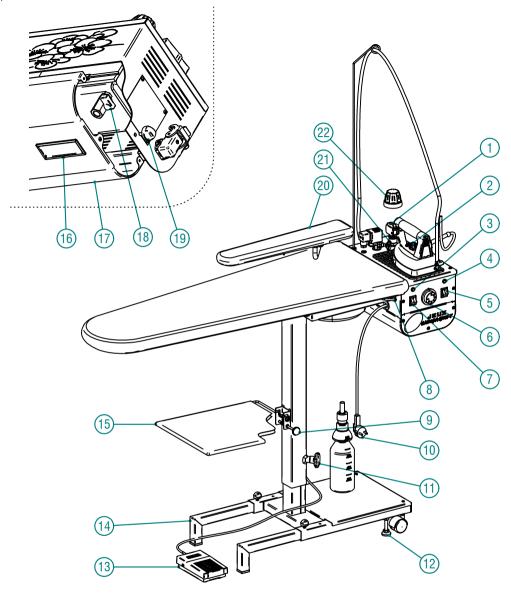

REFERENCES.

- _ IRON MICROSWITCH
- 2 IRON THERMOSTAT
- 3 WATER WARNING LIGHT
- 4 STEAM WARNING LIGHT
- 5 BOILER ON/OFF SWITCH
- 5_ BOILLITONOIT SWITCH
- 6_ BOARD THERMOSTAT
- 7 IRON ON/OFF SWITCH

- 8 HOOK TO BLOCK THE BOARD HORIZONTALLY
- 9 HOOK TO BLOCK THE BOARD UPRIGHT
- 10_ PLUG
- 11_ DEVICE TO ADJUST THE TABLE IN HEIGHT
- 12- ADJUSTABLE FOOT
- 13 VACUUM PEDAL
- 14 SLIDING FOOT

- 15 UNDER COVER TRAY
- 16 HANDLE
- 17 PROTECTION CASE
- 18 BOILER DRAINING TAP
- 19 KNOB
- 20 SLEEVE ARM
- 21_ STEAM FLOW KNOB
- · 22_ FILLING TOP

HOW TO OPERATE THE UNIT:

"This ironing board has been designed to iron any kind of fabric in a professional way by means of a steady steam system"

INSTRUCTIONS

- a) Screw off the filling top (22) and fill the boiler with standard water. Screw the top on again mildly.
- b) Connect the plug (10) to a 220V, earthed power point.
- c) Press the boiler on/off switch (5) to start the boiler, press the iron on/off switch (7) to start the iron.
- d) Adjust the iron thermostat (2) between linen and cotton position (linen position is recommended when dry steam is needed, whereas cotton position is when damp steam is needed).
- e) Before any ironing, please wait for the steam warning light (4) to be lit. Should this warning light go off while you are ironing, please go on with your work. The warning light will come on automatically as soon as the steam has been available again.
- f) Use the board thermostat (6) to adjust the board temperature according to the fabric type pressed. Recommended temperature: 90°C.
- g) Press the iron micro switch (blue push-button)(1) to have the steam coming out from the iron. When you have finished to iron, please shortly operate the vacuum pedal (13)
- h) Use the knob (21) to adjust the steam flow from the iron.
- i) If needed, adjust the 2 feet (12) to balance the full unit and anchor it to the floor.
- j) To close up and fold the ironing table: please put the undercover tray (15) upright; catch the table by the handle (16) below the boiler case and unblock the hook (8); let the table fold and stay upright; block the table in the this position by means of the hook (9); let the feet (14) slide back to save space.
- k) This unit is fitted with a device to adjust the height of the table. This operation can be executed only if the unit is completely off (the board has to be completely cold) and before starting any ironing.
 - If you want to increase the table height, mildly unscrew the knob (9): the board will automatically keep on rising. When the height needed is reached, block the table there by screwing the know (9).
 - If you want to reduce the table heigth, mildly unscrew the knob (9) and keep pressing the board downwards in its central part (in line with the upright framework, never press the board in its right or left edge) as long as the heigth needed is reached. Then screw the knob (9) to block the board there.
- I) Install the arm (20) in the bracket already assembled on the backside of the board.
- m) You are kindly recommended to drain regularly the boiler, more often if the water you use is reach in scales. To do so, unlock the knob (19) and pull the drawer (17) by its handle (16): the draining tap (18) will now appear to blow down the boiler. Open the draining tap (18) and blow down the boiler. When the boiler is drained, close the draining tap (18), push the drawer (17) back by its handle (16) and lock the drawer (17) by the knob (19).

!!! WARNINGS AND SUGGESTIONS: !!!

- Never fill up the boiler.
- Never screw off the filling top (22) when the boiler in under pressure.
- Before screwing off the filling top (22) or draining the boiler by means of the tap (18), please be sure that no steam is still inside the boiler.
- Never let the unit unattended for long, when it is on.
- Once the steam is over, pull out the plug, let the unit rest for 20 minutes, then screw off the top (22) very slowly and refill the water inside the boiler. Now repeat the steps described above.
- Never adjust the table height if the unit is on and as long as you are ironing. Adjust the table height only before ironing, when the unit is completely off the board is completely cold.

.Pag.(3)


SPARE PARTS


If service is needed, please contact service centres authorized


by the manufacturer and ask for original spare parts to be used.


Whether this warning is disregarded, the safety of the unit


may be undermined.

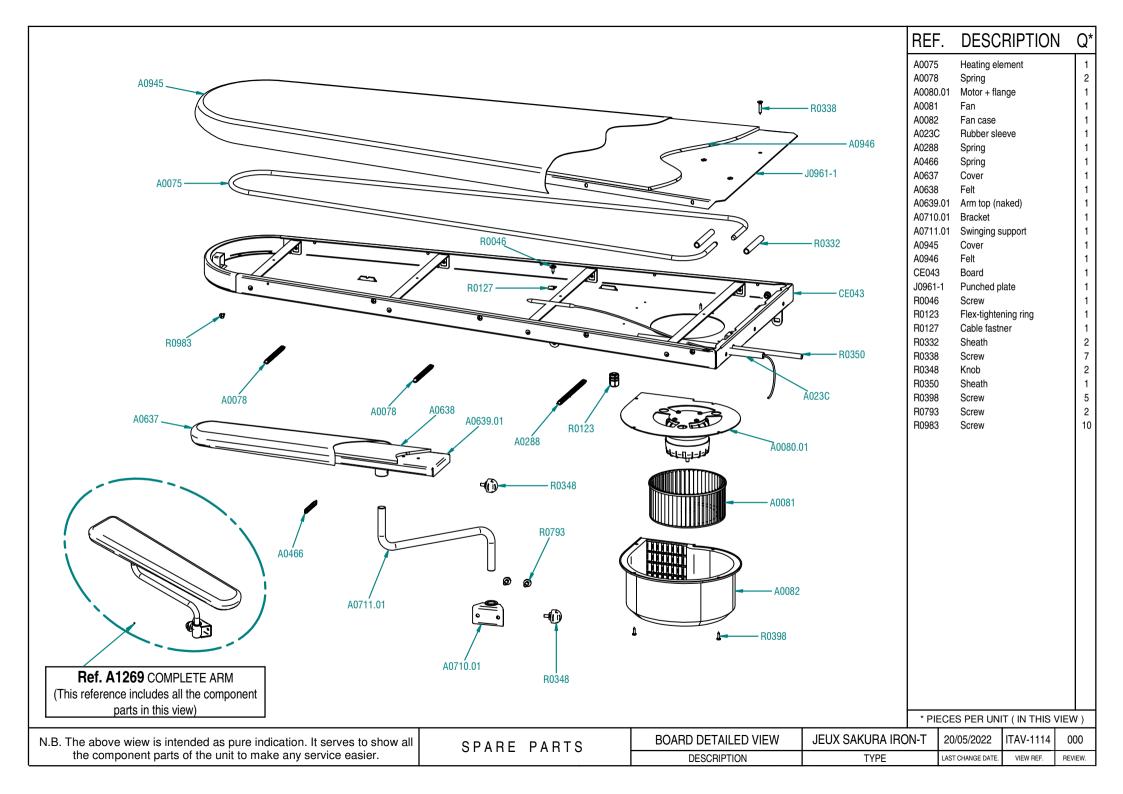

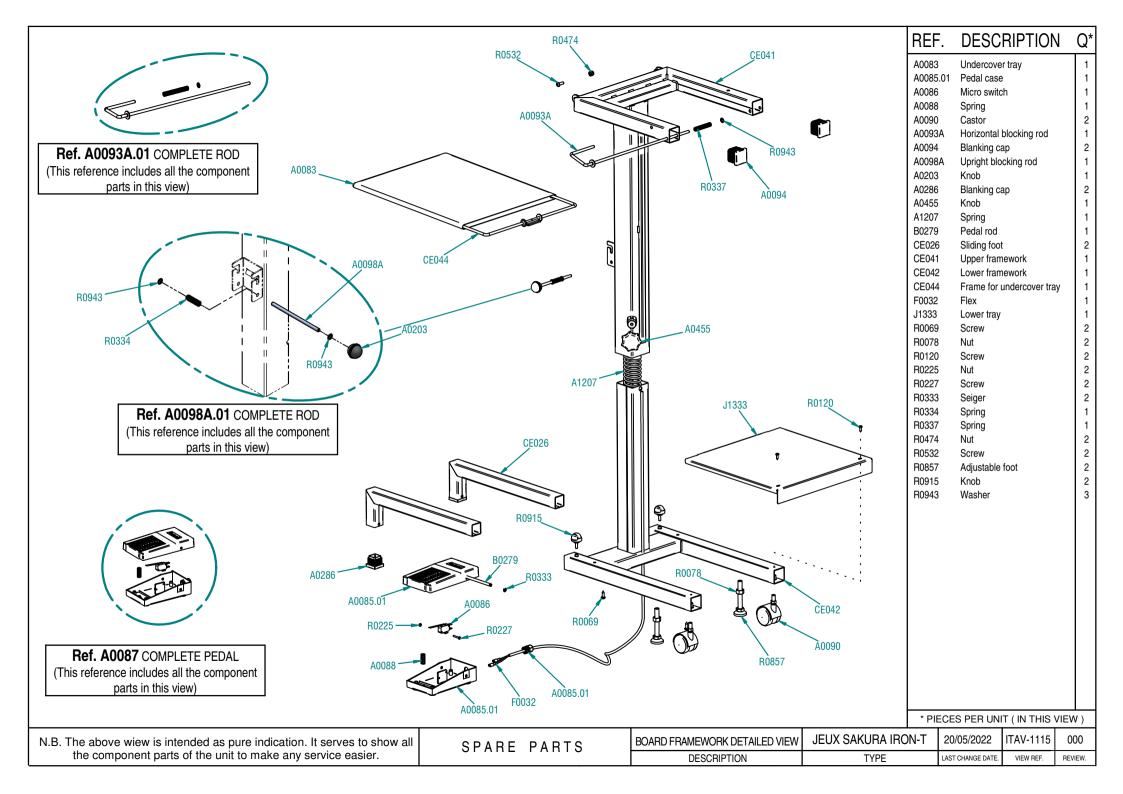

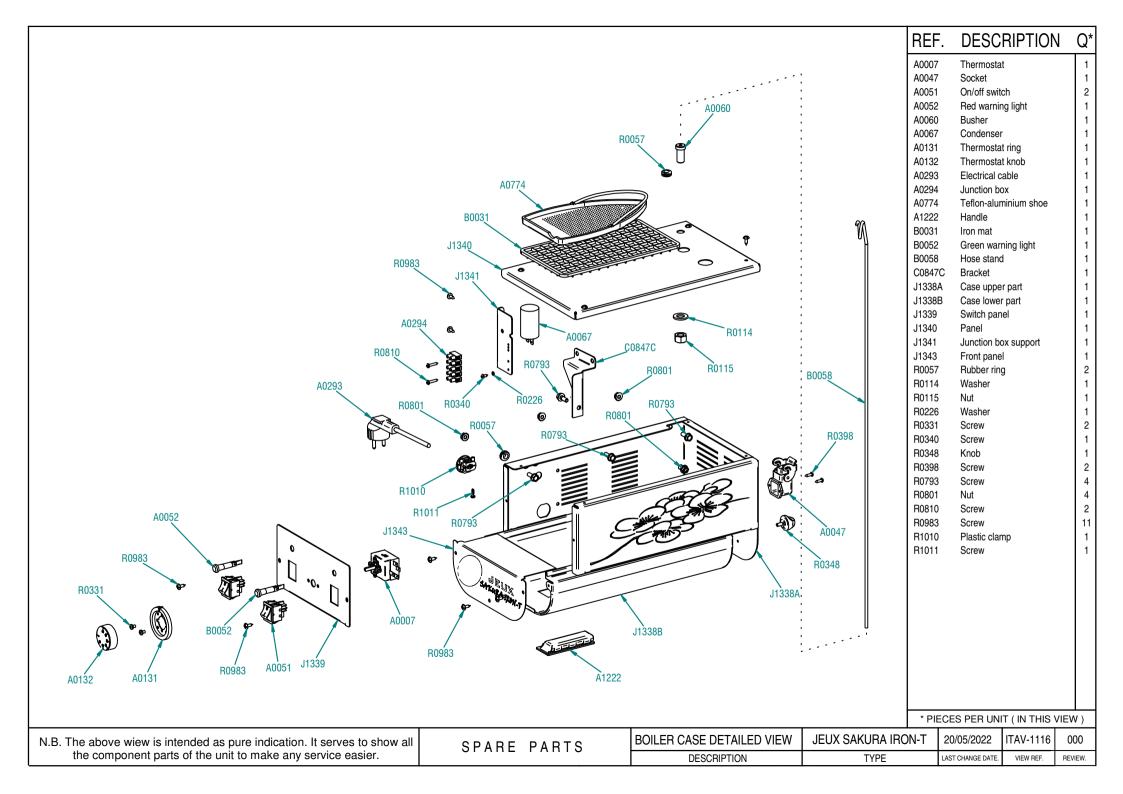

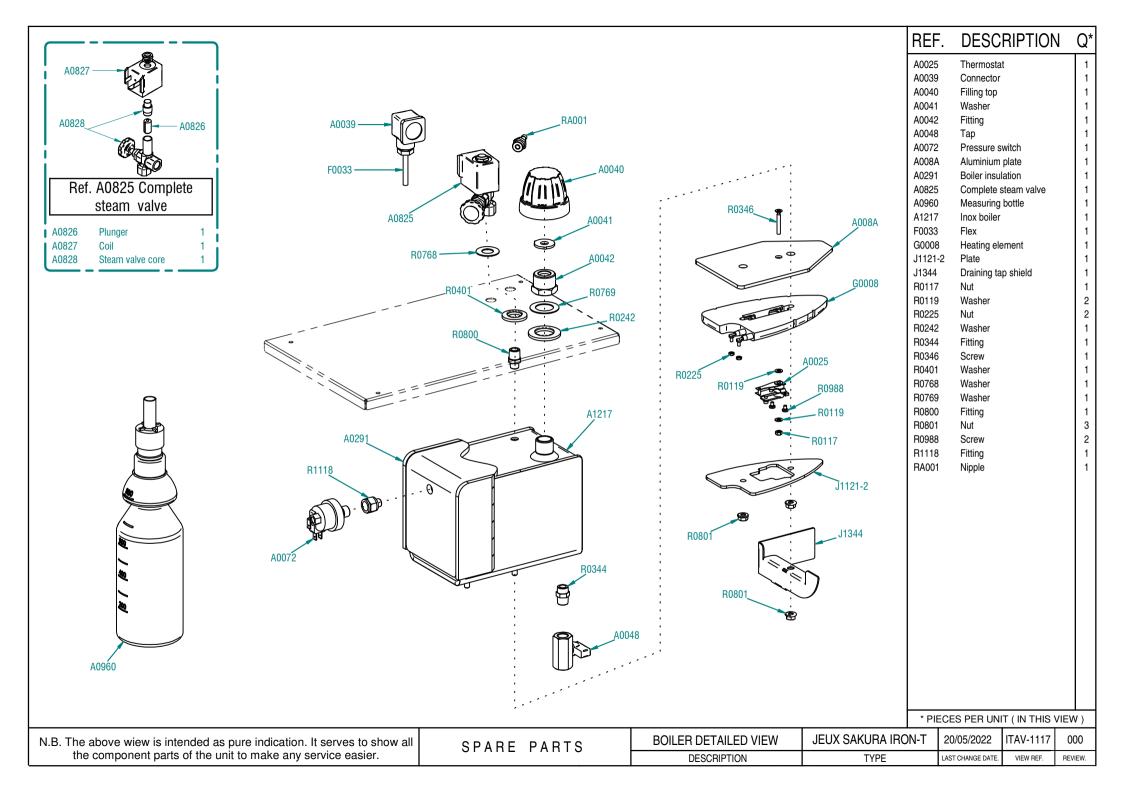


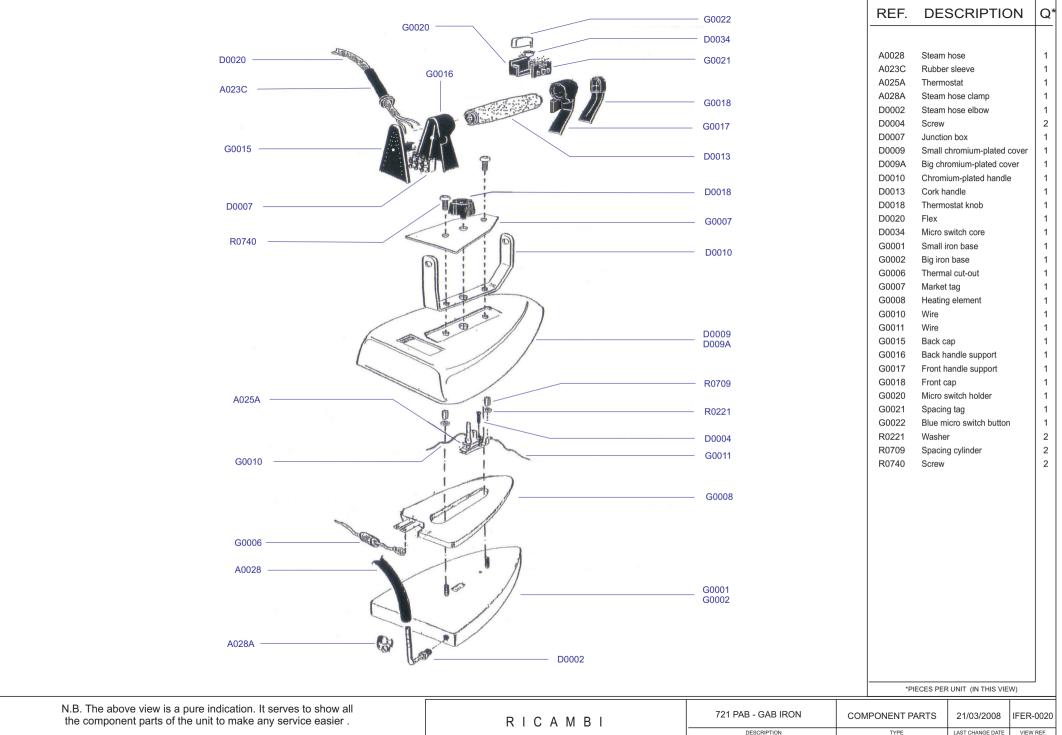

TYPE

LAST CHANGE DATE

VIEW REF.

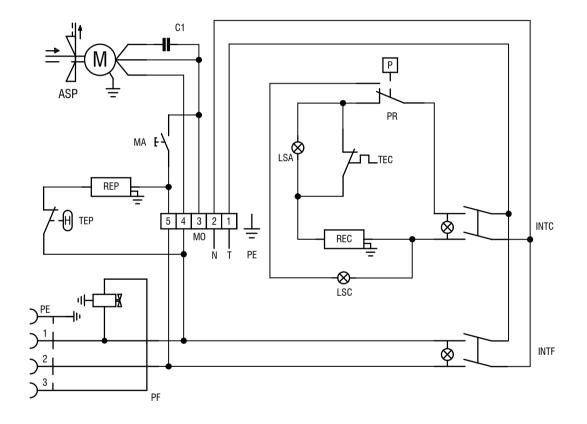

REF.	DESCRIPTION			
INTF	IRON ON/OFF SWITCH			
INTC	BOILER ON/OFF SWITCH			
TEP	BOARD THERMOSTAT			
REP	BOARD HEATING ELEMENT			
PF	IRON SOCKET			
PR	PRESSURE SWITCH			
LSC	STEAM WARNING LIGHT			
MA	PEDAL MICROSWITCH			
MO	CLAMP			
REC	BOILER HEATING ELEMENT			
TEC	BOILER THERMOSTAT			
LSA	WATER WARNING LIGHT			
C1	CONDENSER			
ASP	MOTOR			
N	NEUTRAL WIRE			
T	LIVE WIRE			
PE	EARTH			

WIRING DIAGRAM	JEUX SAKURA IRON-T	20/05/2022	ISE0300	000
DESCRIPTION	TYPE	LAST CHANGE DATE.	VIEW REF.	REVIEW.